

# VARIOUS ELECTRICAL SYMBOLS

find more here: <https://dinhmuonline.com>

|  |                    |  |                  |  |                        |
|--|--------------------|--|------------------|--|------------------------|
|  | CONNECTING LEFT    |  | RESISTOR         |  | ANTENNA                |
|  | CONNECTING RIGHT   |  | POTENTIOMETER    |  | ANTENNA SOCKET         |
|  | SOCKET             |  | POTENTIOMETER    |  | INDUKTOR               |
|  | PLUG               |  | RESISTOR TRIMMER |  | INDUKTOR               |
|  | PLUG CONNECTION    |  | HEATER           |  | INDUKTOR, WITH TAPPING |
|  | CLAMP              |  | HEATER VARIABLES |  | INDUKTOR, WITH CORE    |
|  | CONNECTOR          |  | VDR              |  | TRANSFORMER            |
|  | CONNECTOR          |  | NTC              |  | TRANSFORMER            |
|  | FUSE               |  | PTC              |  | MAGNET PERMANENT       |
|  | FUSE, WITH CONTACT |  | LDR              |  | CERAMIC RESONATOR      |

|  |   |  |   |
|--|---|--|---|
|  | SINGLE SWITCHED WALL SOCKET                             |  | TV AERIAL POINT                                     |
|  | DOUBLE SWITCHED WALL SOCKET                             |  | IMMERSION HEATER AND THERMOSTAT                     |
|  | SINGLE SWITCHED WALL SOCKET 1200MM ABOVE FLOOR LEVEL    |  | MECHANICAL EXTRACT FAN                              |
|  | DOUBLE SWITCHED WALL SOCKET 1200MM ABOVE FLOOR LEVEL    |  | DOOR BELL PUSH                                      |
|  | SINGLE SWITCHED FUSE SPUR BELOW WORKTOP LEVEL           |  | DOOR BELL CHIME                                     |
|  | FUSE SPUR FOR TOWEL RAIL                                |  | THERMOSTAT  |
|  | SINGLE SWITCHED FUSE SPUR AT HIGH LEVEL FOR EXTRACT FAN |  | SECURITY ALARM                                      |
|  | DOUBLE SWITCHED FLOOR SOCKETS                           |  | CONSUMER UNIT                                       |
|  | 1 GANG LIGHT SWITCH                                     |  | TELEPHONE POINT                                     |
|  | 2 GANG LIGHT SWITCH                                     |  | CAT 5 or 6 DATA SOCKET                              |
|  | 1GANG 2 WAY LIGHT SWITCH                                |  | COOKER SWITCH                                       |
|  | 2 GANG 2 WAY LIGHT SWITCH                               |  | MECHANICAL EXTRACT FAN COOKER HOB HOOD              |
|  | 1GANG 3 WAY LIGHT SWITCH                                |  | COMBINED HEAT DETECTOR AND FIRE ALARM SOUNDER       |
|  | 2 GANG 3 WAY LIGHT SWITCH                               |  | COMBINED SMOKE/HEAT DETECTOR AND FIRE ALARM SOUNDER |
|  | 1 GANG PULL CORD LIGHT SWITCH                           |  | AUDIO SPEAKER                                       |
|  | EXTERNAL LIGHT  |  | RADIATOR  |
|  | EXTERNAL LIGHT - BULKHEAD TYPE                          |  | CAT 5E  |
|  | RECESSED DOWNLIGHTER                                    |  | 2 CORE SPEAKER CABLE                                |
|  | WALL LIGHT  |  | UNDERFLOOR HEATING MANIFOLD                         |
|  | LIGHT POINT - PENDANT HOLDER (4 INCH)                   |  |   |
|  | LIGHT POINT - PENDANT HOLDER (6 INCH)                   |  |   |
|  | LIGHT POINT - BATTEN HOLDER                             |  |   |
|  | FLUORESCENT STRIP LIGHT                                 |  |   |